
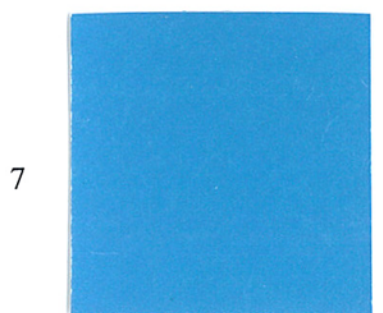


Vzorkovnice TELKYD P100

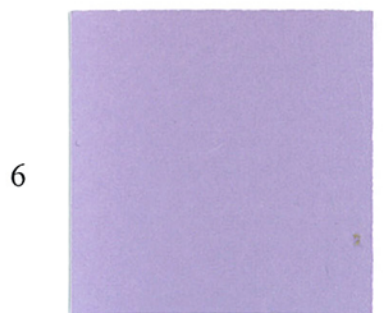

1= 1012
2= 1002
3= 2001,2002,2009,2010,2012,3022
4=
5=3000,3001,3002,3003,3011,3013
5=3027,3031
6=4001,4005,4009
7=5005,5007,5012,5015,5019,5024
8=5000,5003,5004,5008,5011,5013
9=6001,6002,6010,6011,6013,6021
10=6000,6004,6005,6016,6024,6026
10=6029,6032
11=6027,6034
12=5001,5009,5010,5017,5019
13=S2000/0100+1768 50g/kg
13=1016,1018,1021,1022
14
S2000/0100+1768 50g+1778 10g+
1780 0,7g /1kg
14=1007,1017,1028,1033,1034,1037
14=2000,2011

Doporučení: základ bílý, mezivrstva,
vrchní email.